




Read this document carefully before using this device. The guarantee will be expired by device damages if you don't attend to the directions in the user manual. Also we don't accept any compensations for personal injury, material damage or capital disadvantages.

ENDA ET2411 / ET2412 ON/OFF HEAT CONTROLLER

Thank you for choosing ENDA ET2411 / ET2412 ON/OFF Heat Controller.

- ▶ 77 x 35mm sized.
- ▶ Single NTC sensor input.
- ▶ Zero point input shift.
- ▶ Selectable heating or cooling control for C1 relay output.
- ▶ * A1 Relay output for alarm control.(for ET2412)
- ▶ * Selectable independent, deviation and band alarm types.(for ET2412)
- ▶ In the case of sensor failure, relay state can be set to ON or OFF.
Upper and lower setpoint limits can be adjusted.
- ▶ Temperature unit can be selected as °C or °F.
- ▶ CE marked according to European Norms.

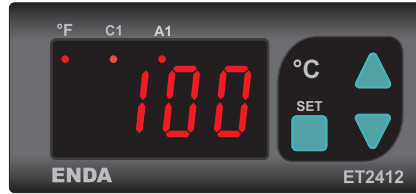

CE **RoHS**
Compliant



Order Code : ET2411 or ET2412 -	1
1 - Supply Voltage	230.....230V AC
	LV.....10-30V DC/ 8-24V AC

CONNECTION DIAGRAM



ENDA ET2411 / ET2412 is intended for installation within control panels. Make sure that the device is used only for intended purpose. The shielding must be grounded on the instrument side. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling. Make sure that the operation temperature is not exceeded.

All input and output lines that are not connected to the supply network must be laid out as shielded and twisted cables. These cables should not be close to the power cables or components. The installation and electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations.

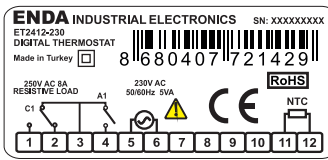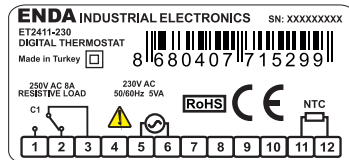

Equipment is protected throughout by **DOUBLE INSULATION**

Holding screw
0.4-0.5Nm.

NOTE:

SUPPLY:



Note:

- 1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.
- 2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

TECHNICAL SPECIFICATIONS

INPUT		
Input Type	Scale Range	Accuracy
NTC Sensor Resistance	EN 60751 -60,0...150,0 °C -76,0...302,0°F	± 1% (for full scale) ± 1 Digit
ENVIRONMENTAL CONDITIONS		
Ambient/Storage temperature	0 ... +50 / °C -25... +70 °C(without icing)	
Relative Humidity	Max. humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C.	
Protection Class	According to EN60529; Front panel: IP65 Rear panel : IP20	
Height	Max. 2000mm	
⚠ Do not use the device in locations subject to corrosive and flammable gasses.		
ELECTRICAL CHARACTERISTICS		
Supply	230V AC +%-10-%20 50/60Hz ; 10-30V DC / 8-24V AC	
Power Consumption	Max. 3VA	
Wiring	Power connector : 2,5mm ² screw-terminal, Signal connector : 1,5mm ² screw-terminal connection.	
Line Resistance	Max. 100ohm	
Data Retention	EEPROM (Min. 10 years)	
EMC	EN 61326-1: 2013 (Performance criterion B is satisfied for EN 61000-4-3)	
Safety Requirements	EN 61010-1: 2010 (Pollution degree 2, over voltage category II)	
Indicator	4 digits, 12,5mm, 7 segment red LED	


OUTPUT	
C1 Output	250V AC, 8A (for resistive load), NO and NC control output.
A1 Output (for ET2412)	250V AC, 8A (for resistive load), NO control output.
Life Expectancy for Relay	30,000,000 Switching for no-load operation; 300,000 switching for 8A resistive load at 250VAC.

CONTROL	
Control Type	Single-setpoint and alarm control.
Control Algorithm	On-Off Control.
A/D Converter	12 bit resolution, 100ms sampling time.
Hysteresis	Adjustable between 0,1 and 20,0°C/F.

HOUSING	
Housing Type	Suitable for flush-panel mounting according to DIN 43 700.
Dimensions	W77xH35xD61mm
Weight	Approx. 215g (After packing)
Enclosure Materials	Self extinguishing plastics

⚠ While cleaning the device, solvents (thinner, benzene, acid etc.) or corrosive materials must not be used.

Dimensions

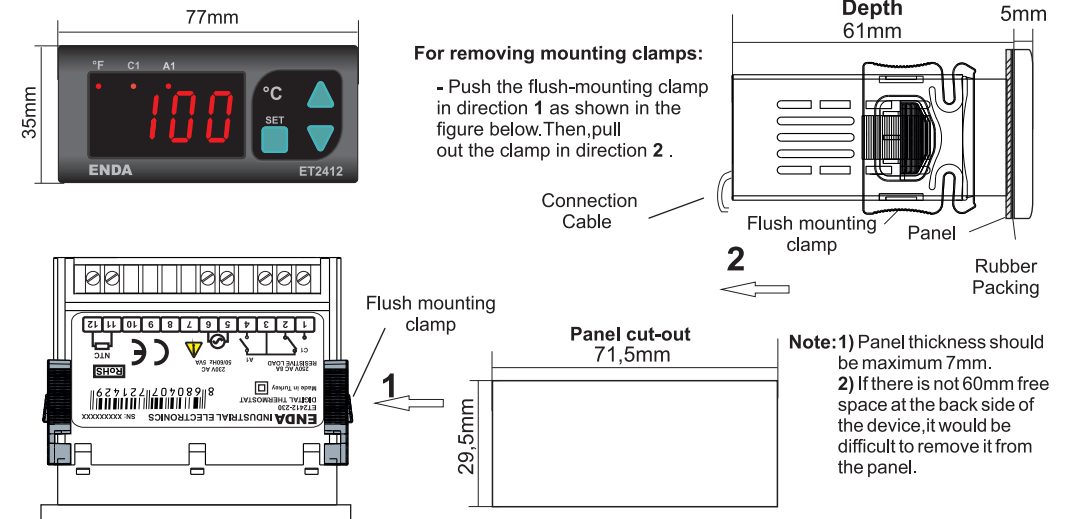

For removing mounting clamps:

- Push the flush-mounting clamp in direction 1 as shown in the figure below. Then, pull out the clamp in direction 2 .

Note: 1) Panel thickness should be maximum 7mm.
2) If there is not 60mm free space at the back side of the device, it would be difficult to remove it from the panel.




SISEL MÜHENDİSLİK ELEKTRONİK SAN. VE TİC. A.Ş.
Şerifali Mah, Barbaros Cad, No:18 Y.Dudullu 34775
ÜMRANIYE/İSTANBUL-TURKEY
Tel : +90 216 499 46 64 Pbx. Fax : +90 216 365 74 01
url : www.enda.com.tr



Programming Diagram


Running Mode

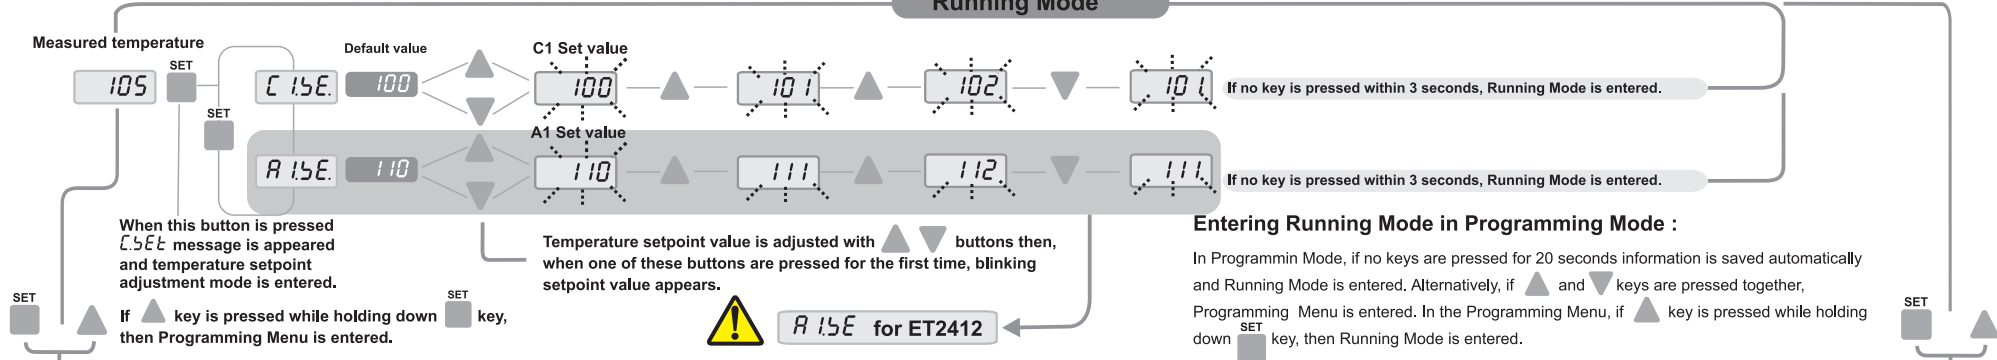

Entering Running Mode in Programming Mode :

In Programin Mode, if no keys are pressed for 20 seconds information is saved automatically and Running Mode is entered. Alternatively, if \blacktriangle and \blacktriangledown keys are pressed together, Programming Menu is entered. In the Programming Menu, if \blacktriangle key is pressed while holding down \blacksquare key, then Running Mode is entered.


Programming Menu

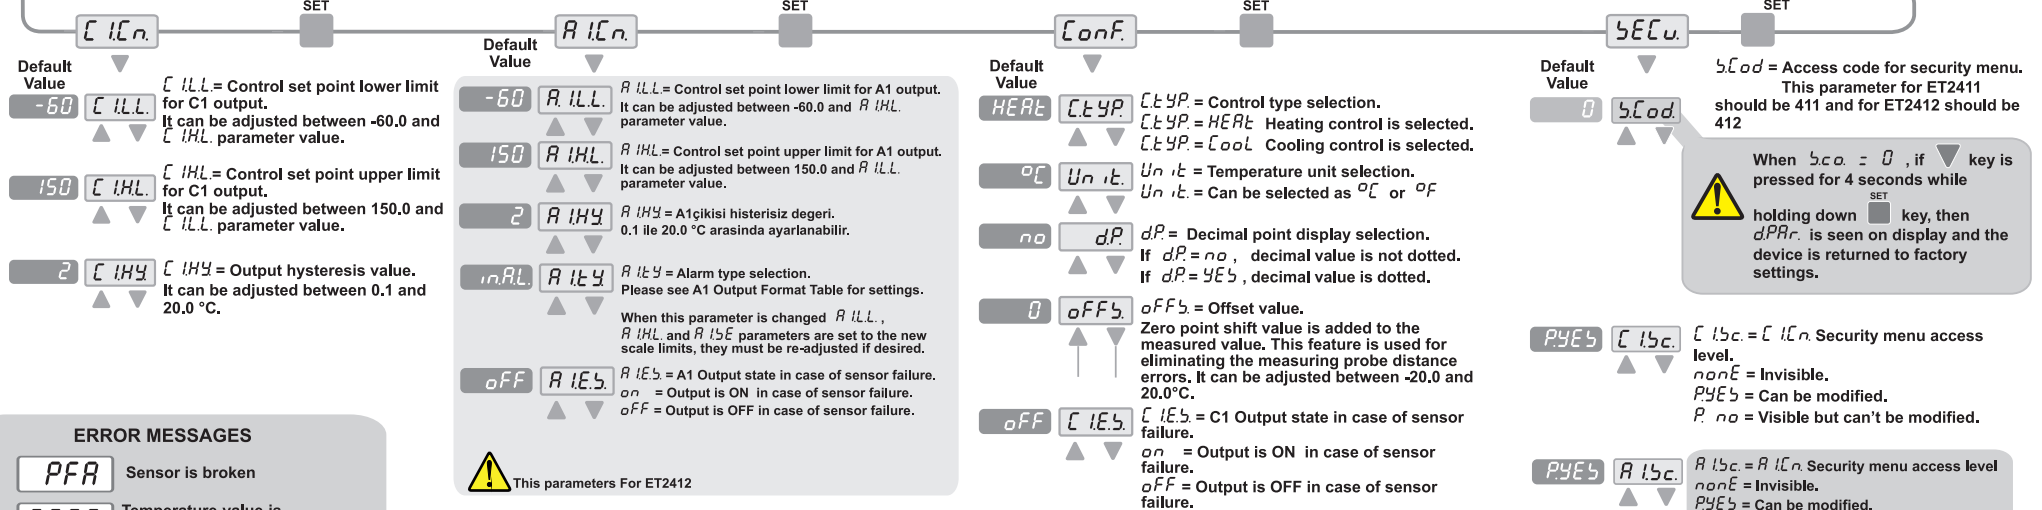

ERROR MESSAGES

PFA	Sensor is broken
----	Temperature value is higher than the scale
----	Temperature value is lower than the scale


Modification of Parameter Diagram

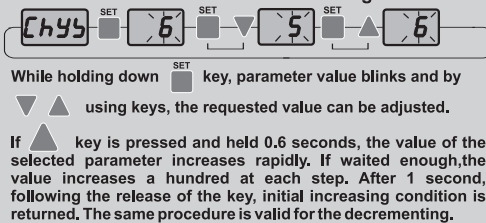

A1 OUTPUT FORMATS

Independent Alarm

R1TY = **in.AL**

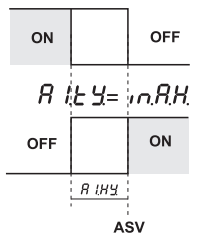


(ASV Min. = Beginning of Scale
ASV Max. = End of Scale)

SV = C1 output setpoint ASV = A1 output setpoint

Deviation Alarm

R1TY = **dE.AL**

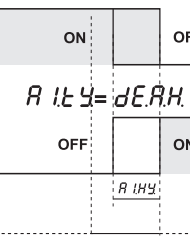


(ASV Min. = -300, ASV Max. = +300)

SV = C1 output setpoint ASV = A1 output setpoint

Band Alarm

R1TY = **b.AL**

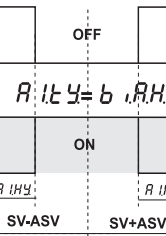

SV = C1 output setpoint ASV = A1 output setpoint

(ASV Min. = 0, ASV Max. = +300)